

MINI F60 Seat Mat & Seatbelt Emulator Installation

Thank you for choosing **SRSDRIVE**

PART 1 Seat Mat Emulator is designed to bypass faulty seat occupancy mat. **This device is compatible with 3-wire Seat Occupancy Mat only!**

PART 2 Seat Belt device is to bypass warning Light/Alarm which occurs after installing seat mat emulator. **NOTE** that this is not a reset tool and after installation clearing error codes with diagnostics may be necessary. **Safety Warning:** with emulator installed child seat should never be fitted in the front passenger seat.

51 The Woods
Buncrana
Co. Donegal
F93 V226
Ireland

Contact us by email or eBay
sales@srsdrive.com

Sales & customer support hours:
Monday - Friday 9.00 – 17.00
Saturdays 10.00 – 2.00
+44(0)7783725020 +353(0)838478878

www.tpmsbypass.com




PART 1 Seat Occupancy Mat emulator for Airbag Light Only.

NOTE: Before installing our emulator please make sure:

- That the Airbag Light is ON because of a faulty seat occup. mat
- Car ECU is free of unrelated error codes such as - belt tensioner (located under the buckle), driver's/passenger's airbag, safety battery terminal, airbag control module, etc.


1) Turn OFF ignition and raise the passenger seat.

2) Under the seat locate yellow connector as in picture and unlock it.

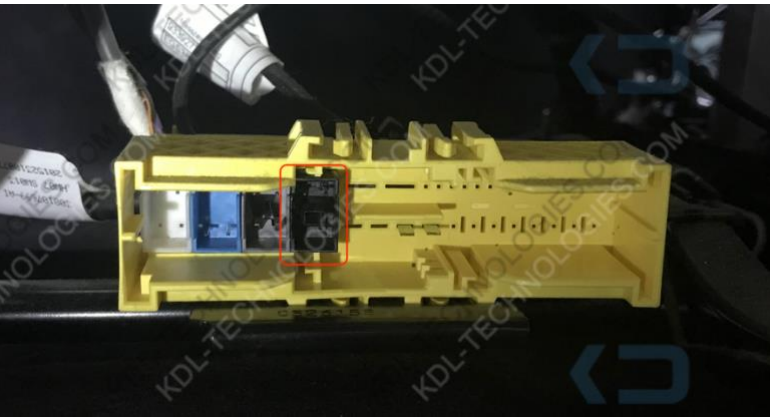

3) Now locate a small black 4 prong rectangle Plug with 3 wires: **WHITE, RED & BROWN** as in picture below. Disconnect original seat mat plug.

4) If Seat Emulator comes with plug just remove original seat plug and insert our emulator plug and reconnect the yellow connector.

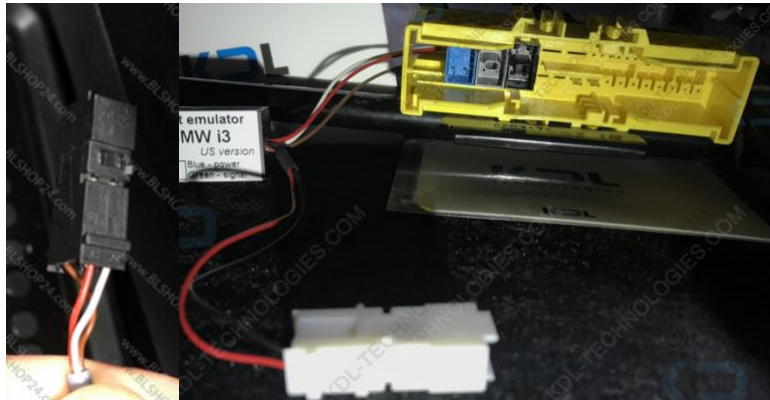

If Seat Emulator comes with wire pins then mount this original plug on our seat mat emulator wires in the same wire order. To remove plug, terminal clips should be pushed in slightly while gently pulling the wire for easy removal. Reconnect the plug now with the seat mat emulator attached to the original socket.

4) Now complete PART 2 steps and install 2 wire seat belt emulator.

NOTE: After installing seatbelt device in case if errors/faults won't reset this emulator has a dip switches inside the box. Open the emulator lid from the back peel the sticker if needed. Change switches as below. Important before changing switches the ignition must be off or emulator disconnected.

1. ON 2. OFF 3. ON 4. ON 5. OFF or 1. ON 2. OFF 3. ON 4. OFF 5. ON.


If warning lights/errors won't reset make sure you send us Diagnostics Error Codes (with error description) for further help.

PART 2 Simulator for Seat Belt Warning Light/Alarm


NOTE: Connecting seatbelt bypass could trigger the airbag light but after faults reset with diagnostics the lights will be off.

1) Turn off the ignition and raise the seat.

2) Locate the same yellow main connector with white rectangular seatbelt plug with purple and orange-black wires.

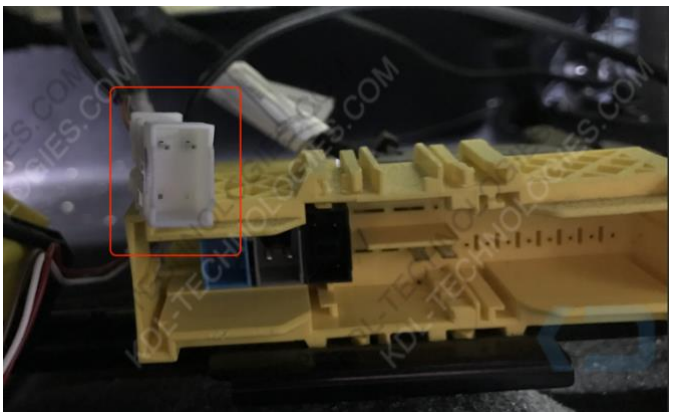

3) Disconnect this original plug and mount it on our seat mat emulator wires. Wires order – black to purple and red to orange/black. To remove plug, terminal clips should be pushed in slightly with using a fine screwdriver while gently pulling the wire for easy removal.

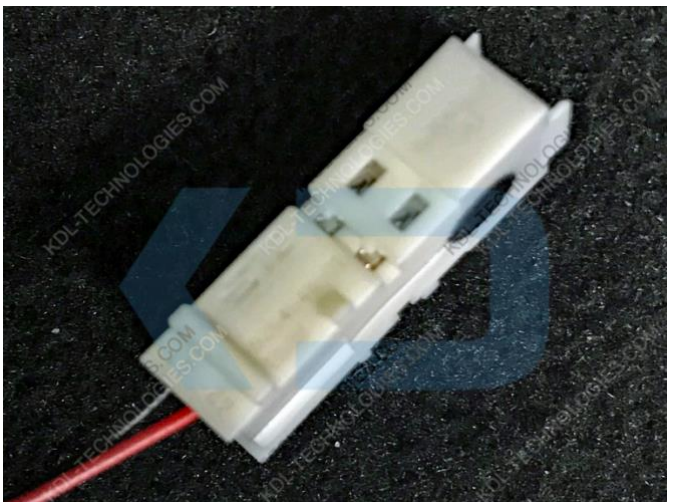

4) Reconnect the plug now with the seat belt bypass attached to the original socket and

5) Installing seat belt emulator may trigger airbag light to pop up in case it was off at first, but this is normal and now you need to reset error codes with proper diagnostics software.

For more Seat Mat Emulators and TPMS - Tire Sensors

Bypass please visit: www.tpmsbypass.com

NOTICE

Customer satisfaction is our priority. If you are happy with our product and service, please leave us a positive 5-star rating feedback and we'll do the same. **Any problems with your order?** Would be appreciated if contact us by eBay message, email or phone instead of opening eBay or Paypal case and we'll be happy to help!

Replacements>Returns: please contact us by eBay message or email.

- All trademarks are the property of their respective owners.